Архангельск (8182)63-90-72 Астана (7172)727-132 Астрахань (8512)99-46-04 Барнаул (3852)73-04-60 Белгород (4722)40-23-64 Брянск (4832)59-03-52 Владивосток (423)249-28-31 Волоград (844)278-03-48 Вологда (8172)26-41-59 Воронеж (473)204-51-73 Екатеринбург (343)384-55-89 Иваново (4932)77-34-06 Ижевск (3412)26-03-58 Иркутск (395)279-98-46 Казань (843)206-01-48 Калининград (4012)72-03-81 Калуга (4842)92-23-67 Кемерово (3842)65-04-62 Киров (8332)68-02-04 Краснодар (861)203-40-90 Красноярск (391)204-63-61 Курск (4712)77-13-04 Липецк (4742)52-20-81 Магнитогорск (3519)55-03-13 Москва (495)268-04-70 Мурманск (8152)59-64-93 Набережные Челны (8552)20-53-41 Нижний Новгород (831)429-08-12 Новокузнецк (3843)20-46-81 Новосибирск (383)227-86-73 Омск (3812)21-46-40 Орел (4862)44-53-42 Оренбург (3532)37-68-04 Пенза (8412)22-31-16 Пермь (342)205-81-47 Ростов-на-Дону (863)308-18-15 Рязань (4912)46-61-64 Самара (846)206-03-16 Санкт-Петербург (812)309-46-40 Саратов (845)249-38-78 Севастополь (8692)22-31-93 Симферополь (3652)67-13-56 Смоленск (4812)29-41-54 Сочи (862)225-72-31 Ставрополь (8652)20-65-13 Сургут (3462)77-98-35 Тверь (4822)63-31-35 Томск (3822)98-41-53 Тула (4872)74-02-29 Тюмень (3452)66-21-18 Ульяновск (8422)24-23-59 Уфа (347)229-48-12 Хабаровск (4212)92-98-04 Челябинск (351)202-03-61 Череповец (8202)49-02-64 Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47

Россия (495)268-04-70

Казахстан (772)734-952-31

## https://micronic.nt-rt.ru/ || moc@nt-rt.ru

## **MICRONIC PUSH CAP DECAPPER CP620**



With the ever-growing requirement for higher sample throughput in many laboratories the Push Cap Decapper CP620 enables significant productivity gains to be made in the opening of multiple sample storage tubes. The internal cap grippers are developed in such a way that cross-contamination is minimized. The gripper moves down slightly into the cap while the rack in the sleigh is moving backwards, ensuring a smooth and safe removal of the caps. Through a friendly user interface the user chooses the correct rack to decap, without using different adapters.

## IN-HOUSE ASSEMBLY & EXCEPTIONAL SERVICE

The Micronic Capping & Decapping equipment is designed and assembled in-house. We have well-trained personnel on hand to provide service on equipment. These services range from annual maintenance, installation support and customization, to repairs.

High-level service is of paramount importance at Micronic. By assembling equipment in-house, Micronic's equipment assembly personnel and engineers have the first-hand knowledge and skills necessary to perform services quickly and smoothly.

At Micronic, we are committed to offer top-of-the-line products, delivering exceptional quality, reliability and durability. Above all, we stand behind our solutions, and are confident that you will too. Micronic warrants that its products are of satisfactory quality and conform to applicable EU legislation. If the product turns out to be defective, Micronic will arrange to repair or replace the product during the warranty period. The warranty period begins on the day of Micronic's invoice of the original product and ends after 1 year for (De)Capping equipment. Additionally, we offer calibration services for Micronic Screw Cap Recappers. The service ensures that the Recappers are set to a precise torque value for an optimal sealing performance.

## Parameter Push Cap Decapper CP620

Rack compatibility	ANSI/SLAS standard 96-format
Cycle time	10-15 seconds
Dimensions	53x26x37cm / 21x10x14inch
Weight	25kg / 55lbs
Voltage	115 - 230 V